

# Longer Rope Compact Winch

Model: CWL-200L

PN: 372846 110V 372992 220V 372856 240V 373134 230V

375433 240V

## **Introduction**

#### ▶ Feature

Lifting capacity: 200 kg wire rope top layer

Lifting height: 69 m

Lifting speed: 11 – 16 m/min

Motor output: 1.2kw x 12A at 110V; 1.5kw x 7.5A at 220-240V

Brake: Electromagnetic and mechanical ratchets

Control: Pendant switch powers the winch

### ▶ Unpacking

Winch assembly
Wire rope 5 mm x 71 m with weight hook CHW-0031
Power lead 1.5 mm² x 3C x 3 m and plug
Pendant switch PB-417 w/cord 1.25 mm² x 6C x 10 m

#### ► Read this manual carefully

You should carefully read and understand this manual before operating it. Careless winch operation may result in personal injury hazards or property damage.

#### ► Information requesting or parts ordering

Please specify the followings information:


- · Winch PN
- · Serial number
- · Part description
- · Replacement Part number
- · Quantity for each part

#### Installation


Before using the winch, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.

#### ► Wire rope replacement

- Insert the wire rope into the hole of drum and fix it with a P. T. screw, then press the "UP" button of switch for rotate the drum in the lifting direction.
- Wind the wire rope accurately around the drum, and an irregular winding will cause the load to be swing, thus damaging the wire and reducing the life of the winch.
- · When replacing, please refer to the following procedures.
- \*Pull out a R-dowel "D" from the round head pin "C".
- \*Pull out a round head pin "C" from hook body "A".
- \*Put a wire rope "B" into the hole of hook body "A", and insert a round head pin "C" through wire rope and fixture hole of hook body "A".
- \*Insert an R-dower "D" into the hole of round head pin "C".

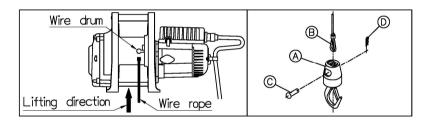

## ▶ Wiring Diagram

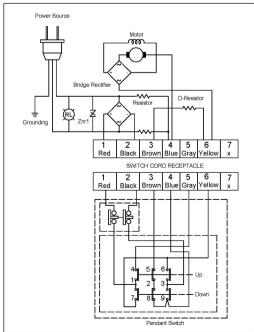

# **Warning**

- The winch is not intended to be used in any manner for the movement or lifting of personnel.
- The lifting capacity shown is based on the top layer of rope on the drum.
- The rope winding on the drum shall remain 5 wraps from the drum.

# Parts List

Item No.	Description	Part No.	Qty	
1	Gearbox rear cover kit	880546	1	
2	Ratchet stopper kit	880547	2	
3	2 <sup>nd</sup> shaft	880548	1	
4	3 <sup>rd</sup> gear kit	880549		
5	Brake kit	881516	1	
6	Tie bar kit	880575	1	
7	Tie bar kit A	880576	2	
8	Wire rope	880577	1	
9	Weight hook	880384	1	
10	Gearbox support rack kit	880555	1	
11	Output shaft kit	880556	1	
12	Drum kit	881520	1	
13	Motor coupling kit	881553	1	
14	Motor support rack kit	880558	1	
15	Torque shaft kit	881517	1	
16	Motor housing kit	880561	1	
17	Carbon brush holder kit	880472	1	
18	Carbon brush 220/230/240V	880563	2	
	Carbon brush 110V	880473		
19	Armature core	As arranged	1	
20	Cooling cover	880564	1	
21	Armature winding	As arranged	1	
22	Motor rear cover kit	880566	1	
23	Terminal upper cover	880535	1	
24	Control panel w/lead	As arranged	1	
25	Lower plate	880567	1	
26	Remote control, PB-417	883145	1	
27	P type hanger kit	881574	1	

## Part No. configurations

<u>Voltage</u>	Armature winding	Armature core	<u>Voltage</u>	Control panel w/lead	
100/110 V	880512	880972	110 V	3 round pins	881231
220/230 V	880518	880976	220~240V	3 round pins	881232
240 V	880519	880977	220/240 V	3 flat pins	881233

## **Winch Assembly**

