

COMEUP WINCH

Model: *GTD-800*

PN: 750925 12V
750955 24V
751000 48V

Introduction

► Feature

- Line lifting: 362 kg / 800 lb wire rope first layer
- Wire rope: 4.0 mm × 18.3 m (5/32" × 60') galvanized aircraft A7 × 19
- Brake: Mechanical spring applied and permanent motor dynamic brakes together
- Control: Handheld pendant switch powers the hoist

► Unpacking

- Hoist assembly..... 1 pc
- Control box..... 1 pc
- Remote control..... 1 pc
- Wire rope with clevis hook..... 1 pc

► Read this manual carefully

You should carefully read and understand this manual before operating it. Careless hoist operation may result in personal injury hazards or property damage.

► Information requesting or parts ordering

Please specify the following information:

- Hoist PN
- Serial number
- Quantity for each part
- Part description
- Replacement part number

Installation


Before using the hoist, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.

► Hoist mounting

Four (4) M8 x 25L 8.8 grade with 22 N-m torque settings (maximum) high tensile steel bolts must be used in order to sustain the loads imposed on the winch mounting.


► Wire Rope Replacement

- Feed the end of the wire rope into anchor hole in the drum and make a self-circle on the anchor pocket. Insert a wedge in the self-circle and tighten the rope for securing purpose.
- Make sure the first layer of wire rope is tight and maintain a freeboard at least 1.5 x rope diameter.
- Wire rope shall be wound in an under-wound orientation only.

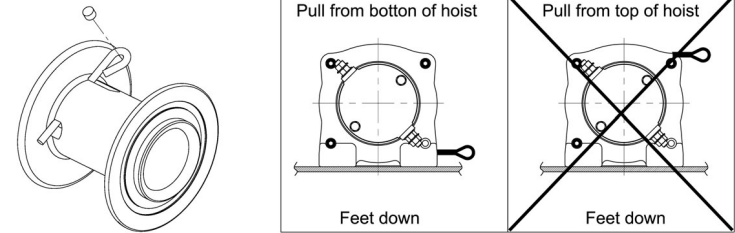


► Wiring Diagram

- Connect positive/negative terminal cables to the winch motor.
- Attach the ground lead firmly to the negative (-) battery terminal and power lead to the positive (+) battery terminal. The voltage drop for the winch motor must not exceed 10% of the nominal voltage of 12/24V DC.

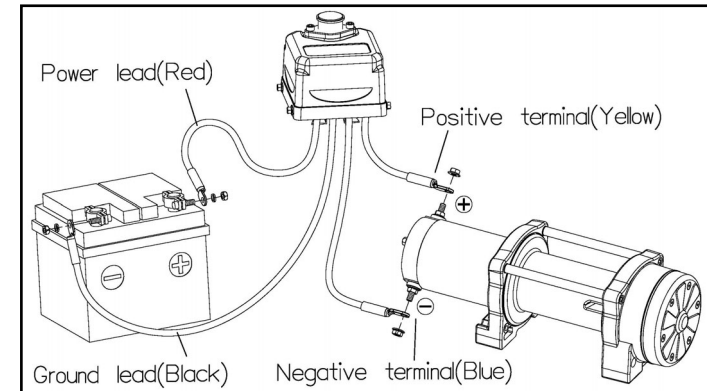

► Nut fastening for motor & contactor

- Holding the lower nut on the stub and fastening the upper nut clockwise.
- The torque setting for nut is 5.7N-m / 50 lb-in.

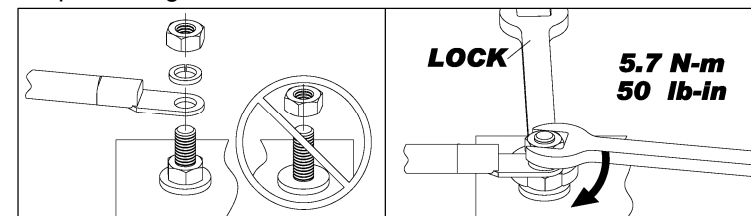

Warning

- The operator shall always work in compliance with the operating instructions.
- Overload shall be forbidden and overload protection shall be required.
- Ban on transporting persons and excessive inching shall be avoided.
- Don't try to move obstructed loads and side-pull of load is not allowed
- The rope winding on the drum shall remain 5 wraps from the drum.

Parts List

Item No.	Description	Part No.	Qty
1	Motor 12V	882417	1
	Motor 24V	882288	
	Motor 48V	884469	
2	Motor couple kit	884271	1
3	Drum bushing	880990	2
4	Drum kit	882319	1
5	Tie bar kit	881007	1
6	Tie bar kit	881008	2
7	Gearbox support rack	880994	1
8	3 rd stage carrier	880995	1
9	2 nd stage carrier	880996	1
10	1 st stage carrier	881009	1
11	2 nd ring gear kit	880998	1
12	1 st shaft kit	881010	1
13	Gearbox kit	882418	1
14	Gearbox rear cover kit	882320	1
15	Remote control	880025	1
16	Control box 12V	882313	1
	Control box 24V	882314	
	Control box 48V	884466	
16-1	Remote socket kit	880029	1
16-2	Control pack 12V	882315	1
	Control pack 24V	882316	
	Control pack 48V	884467	
17	Mounting hardware	882545	1
18	Wire rope	882411	1
19	Clevis hook	881997	1

Hoist Assembly

